




# Assembly Instructions

## TL, CL, ATL

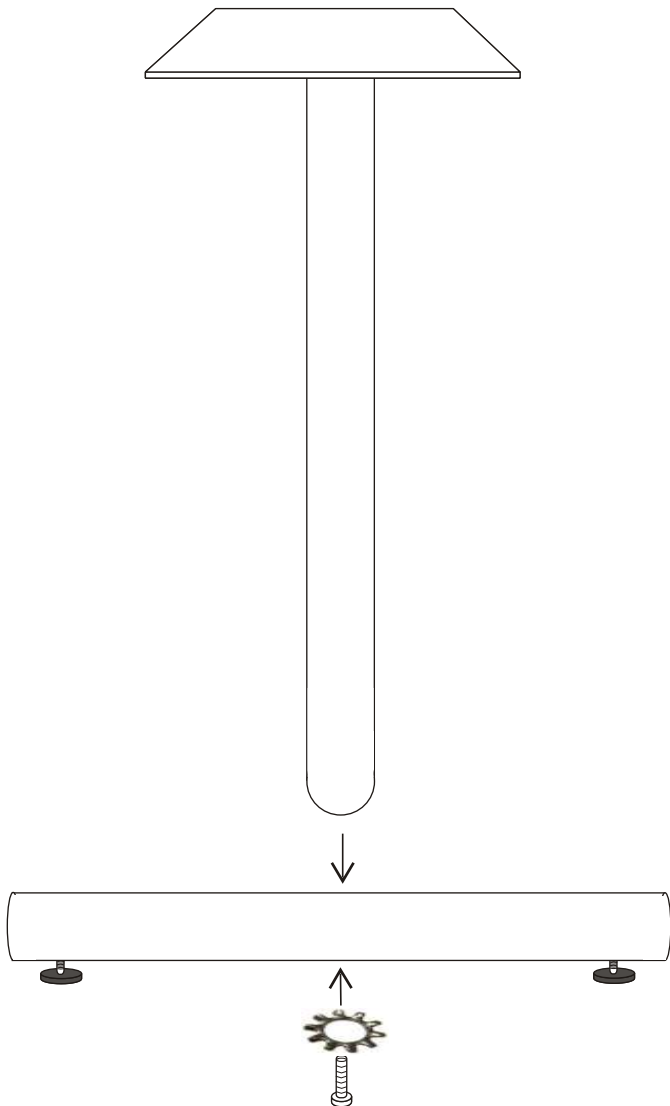


*Components needed for assembly:*

  
(1) Hex head  
bolt

  
(1) 22" Foot  
(2" diameter)

  
(1) External  
tooth washer

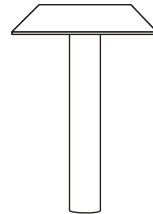

(1) 25.5" vertical column with  
welded mounting plate

### Instructions

1. Set mounting plate on the floor with the bottom of the column up. Place the foot over the column lining up the holes in the foot and the column. Insert (1) bolt and washer through the foot and into the column.
2. Use either 13mm ratchet wrench or impact drill to **tight bolt as much as possible**.